


## Interior lights list

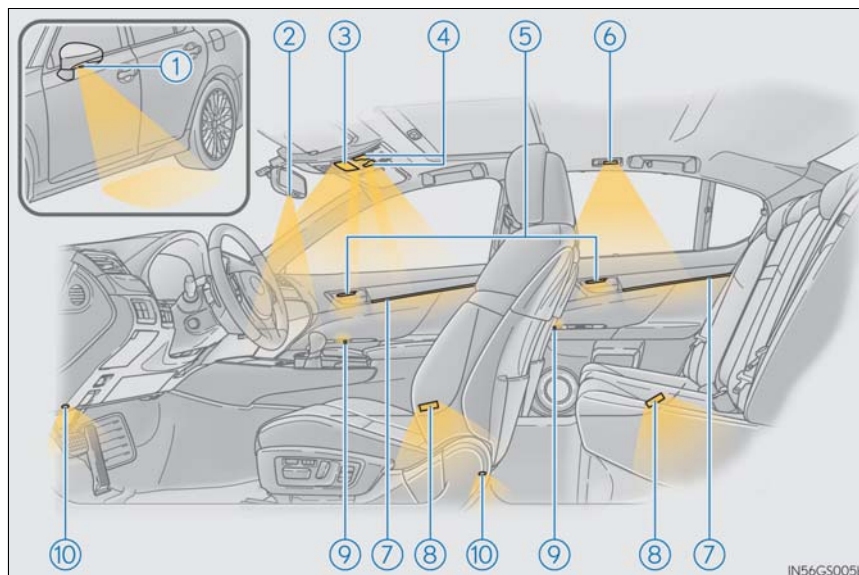


- |                                   |                                  |
|-----------------------------------|----------------------------------|
| ① Outer foot lights               | ⑥ Rear personal lights (→P. 549) |
| ② Shift lever light               | ⑦ Ornament lights                |
| ③ Interior light (→P. 549)        | ⑧ Door courtesy lights           |
| ④ Front personal lights (→P. 549) | ⑨ Power window switch lights     |
| ⑤ Inside door handle lights       | ⑩ Footwell lights                |

When the instrument panel light control switch is turned to minimum and the tail lights are on, the inside door handle lights, the ornament lights and the footwell lights will turn off. (→P. 80)

### Interior light

#### ① Turns the light on/off

The rear personal lights are also turned on/off by the interior light operation. However, if the interior light is turned off after being turned on while the rear personal lights are turned on, the rear personal lights will not turn off simultaneously.

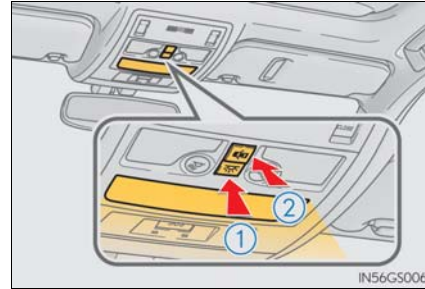


#### ② Turns the door position on

### Personal lights

#### ■ Front


Turns the light on/off

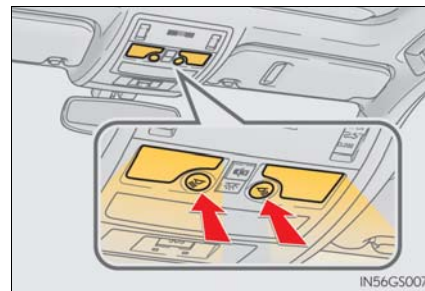

#### ■ Rear

Turns the light on/off

If the lights are turned on by interior light operation, the lights cannot turn off by pressing the switch.

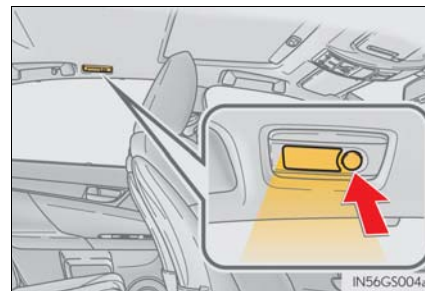

**■ Illuminated entry system**

The lights automatically turn on/off according to engine switch mode, the presence of the electronic key, whether the doors are locked/unlocked, and whether the doors are opened/closed.

**■ To prevent battery discharge**

If the interior lights remain on when the engine switch is turned off, the lights will go off automatically after 20 minutes.

**■ Customization**

Setting (e.g. the time elapsed before lights turn off) can be changed.  
(Customizable features: →P. 777)

**NOTICE****■ To prevent battery discharge**

Do not leave the lights on longer than necessary when the engine is not running.